

What to do if...  
What to do if...



A tire punctures

P. 527 If you have a flat tire



The hybrid system does not start

P. 537 If the hybrid system will not start

P. 98 Immobilizer system

P. 543 If the vehicle 12-volt battery is discharged



The engine coolant temperature warning light flashes or come on

P. 548 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 539 If you lose your keys



The 12-volt battery runs out

P. 543 If the vehicle 12-volt battery is discharged



The doors cannot be locked

P. 58 Doors



The horn begins to sound

P. 100 Alarm



The vehicle is stuck in mud or sand

P. 552 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 498 If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 498



Charging system warning light

P. 498



High engine coolant temperature warning light

P. 499



Brake system warning light

P. 499



Malfunction indicator lamp

or



P. 499



SRS warning light

P. 499



"ABS" warning light

or



P. 499



Electric power steering system warning light

P. 500



Pre-collision system warning light\*

P. 500



"AFS OFF" indicator light\*

P. 500



Slip indicator light

P. 500



"LKA" indicator light\*

P. 500



Cruise control indicator light\*

P. 500



Radar cruise control indicator light\*

P. 500



Open door warning light

P. 501



Low fuel level warning light

P. 501



Driver's seat belt reminder light

P. 501



Front passenger's seat belt reminder light

P. 501



Master warning light

P. 501



Tire pressure warning light

P. 502



Automatic High Beam Indicator light\*

P. 500

\*: The light flashes to indicate a malfunction.

